

Your Realistic Stereo L-Pad is for use as a balance control between a pair of main speakers and a pair of remote speakers in a single room or as a volume control for a remote pair of speakers in a separate room.

Your L-pad:

- Uses solderless screw-terminal connectors
- Fits most standard wall boxes or cutouts
- Comes with a face plate and mounting hardware


INSTALLATION

Follow these steps to install your L-pad.

1. Connect your amplifier/receiver's positive (+) and negative (-) left remote speaker output leads to the L-pad's corresponding positive and negative CH.1 IN terminals.
2. Connect your amplifier/receiver's positive (+) and negative (-) right remote speaker output leads to the L-pad's corresponding positive and negative CH.2 IN terminals.
3. Connect the left remote speaker's positive (+) and negative (-) leads to the L-pad's corresponding positive and negative CH.1 OUT terminals.
4. Connect the right remote speaker's positive (+) and negative (-) leads to the L-pad's corresponding positive and negative CH.2 OUT terminals.

Notes:

- Be sure you match positive to positive and negative to negative when you connect your speaker leads to your L-pad's terminals. Improper connection causes abnormal stereo reproduction and reduces the bass response.

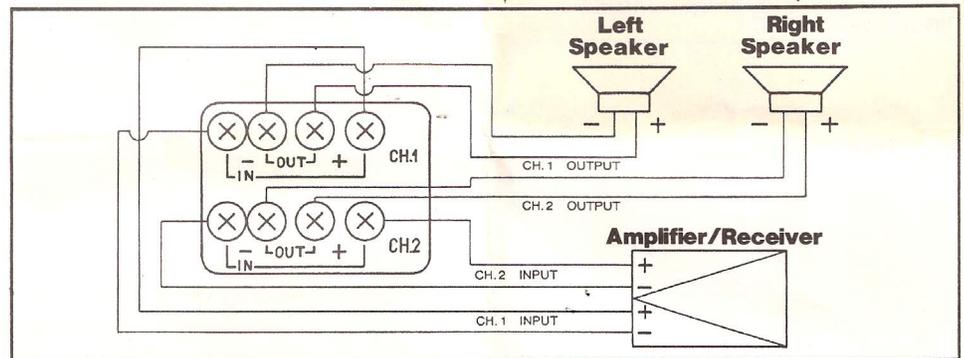

© 1989 Tandy Corporation.
All Rights Reserved.

Realistic is a registered trademark of Tandy Corporation.